

AQUARIUM INSTRUCTIONS FOR USE

For Household Use Only

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



This Instruction Sheet Covers These Item #'s AP11001GBFFP, AP10001GBFFP, AP15000GBFFP, AP16000PFFFP, AP17000PGFFP, AP20000GBFFP, AP20001GBFFP

Children under the age of 13 should be supervised by an adult with the setup, maintenance and fish care

1. Your Aquarium

People of all ages enjoy looking at aquariums. Aside from the belief that an aquarium is beautiful, many also believe owning an aquarium can be relaxing, rewarding and a great conversation piece all at the same time. You will find you will have many enjoyable hours with your new aquarium and fish.

Included:

1. Fish Bowl
2. Full Hood
3. LED Light



4. Rinsing Gravel and Decor

Rinse aquarium, filter, stones, plastic plants, and other decorations under running tap water. Place gravel in a colander or new bucket and rinse under running tap water until water runs clear. Do not clean aquarium, decorations, or filter with household soaps as they can harm your fish.

NEVER USE WINDOW CLEANER, ABRASIVE CLEANERS, HOUSEHOLD CLEANERS, SCOURING COMPOUNDS, GRITTY CLOTH, OR STRONG SOLVENTS SUCH AS ALCOHOL, ACETONE, OR CARBON TETRACHLORIDE. THIS WILL CAUSE DAMAGE TO THE AQUARIUM'S SURFACE.



Gravel and Decorations are not included with this aquarium kit

2. Important Instructions

See IMPORTANT SAFETY INSTRUCTIONS SECTION before operating this unit.

- For household use only.
- Confirm your tank has not been damaged during shipping before you start the setup process.
- Completely install aquarium before operating.
- This unit is powered by 2 AA batteries or 5V Power Adapter (AP51000), neither are included in this kit.
- To avoid the electrical outlet from getting wet, position the tank to one side of a wall mounted receptacle to prevent water from dripping onto it. A "Drip Loop" should be made as shown at bottom right.
- Never wash bowl in dishwasher or extremely hot water as damage may occur to the unit.



5. Battery Requirements

WARNING:

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard or Rechargeable Batteries.
- LED light uses 2 AA batteries.

(Note battery position and orientation)

TIMER SELECTION SWITCH with 3 settings you can select:

1. Continuous On *
2. 2 Hour Duration (2H)
3. 4 Hour Duration (4H)



*It is recommended to use this setting sparingly in order to conserve battery power unless using Power Adapter 5V 150mA (AQ51000) or USB connector.

3. Tank Placement

Leave enough space in back of the aquarium to allow easy access to electrical outlets and to plug in any electrical cords from various electrical equipment.

Good places for your aquarium

- On a table or aquarium stand that's capable of bearing the weight of your filled aquarium.
- Places to avoid
- Near direct sources of sunlight (e.g. windows), unwanted algae growth may occur.
- Near direct sources of heat or air conditioning (e.g. radiator, forced air vent).
- Drafty areas.
- Around sources of noise (e.g. stereo speakers, TV).
- Do not place aquarium on a surface that can be damaged by water.
- Where water can come in contact with electrical appliances.



6. LED Light

- To turn on LED light press the blue button switch on top of the light.
- Continue to press the blue button until desired color is located. 7 colors to choose from; amber, aqua, blue, green, purple, red, and daylight white.
- Optional Koller Products Power Adapter 5V 1A, model AQ51000, (sold separately).



7. Add Gravel and Decor

Place gravel, rocks and decorations in the tank, spreading the gravel evenly across the bottom of the aquarium.



8. Adding Water

Fill the aquarium with water to within two inches from the top of the tank. Treat water with a water conditioner to remove chlorine and chloramines from tap water that can be harmful to your fish.

Confirm water temperature in aquarium has reached room temperature.



9. Introducing Fish

- Float the bag with your fish on the surface of the aquarium for 15 minutes.
- Open the bag containing your new fish, taking care that the bag does not collapse, and add a little aquarium water every two minutes directly to bag.
- Continue this process for 10 minutes, allowing the bag to fill with water.
- Take bag with fish to sink and gently scoop fish out with a net or pour bag of water into net. Now gently place fish into aquarium. Do not add water from fish bag in order to prevent introduction of possible disease or parasites from store water.

10. Cleaning Your Fish Bowl

Fill a clean container (one that has never been used with soaps or detergents) with water from the tap. Allow this container to sit overnight to enable it to reach room temperature. Use your aquarium thermometer to measure the water temperature and adjust temperature accordingly. Add a water conditioner product that instantly makes tap water safe, removing chemicals that can be harmful to your fish.

Before cleaning the fish bowl, you will need to temporarily move your fish to another container. Fill this container with existing water taken from the fish bowl, using this water will minimize shock to the fish.

Remove all the decorations and place them on paper towels to catch dripping water. Place a colander or strainer in the sink and pour the water and gravel into it, rinsing gravel with lukewarm water.

LED LIGHT FCC COMPLIANT



FCC VERIFICATION TEST
PRSZ18052305E

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

11. Reassembling Fish Bowl

Under running warm water, use your hand or clean micro-fiber cloth and gently wipe the inside surfaces of the bowl. Do not use soap or other detergents. Do not place bowl in dishwasher or hot water since damage to the bowl can occur. Rinse the bowl thoroughly and proceed to cleaning the ornaments and decorations in the same manner.

Once everything is clean, reassemble your fish bowl, adding back gravel and decorations. Refill fish bowl with the water that sat overnight.

Net your fish out of the temporary container and return them to the clean fish bowl.

LIMITED WARRANTY

KOLLER PRODUCTS LLC warrants this aquarium product to be free from defects in material and workmanship under normal use and service and according to the provisions as specified in the accompanying assembly and operating instructions, for a period of 1 year from date of purchase.

This warranty does not cover and KOLLER PRODUCTS LLC is not liable for the cost of repair or replacement of parts which have been subject to misuse, negligence, accident, improper installation, damage during shipment or handling, normal deterioration due to wear and exposure or defects caused by unauthorized parts or modification.

UNDER NO CIRCUMSTANCES WILL KOLLER PRODUCTS LLC BE LIABLE FOR ACCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROPERTY OR EQUIPMENT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you the legal rights, which vary from state to state.

**WARRANTY HELP
REPLACEMENT PARTS
OR
TECH SUPPORT
CONTACT**

customercare@kollerproducts.com

(800) 545-1344

Manufactured by KOLLER PRODUCTS LLC®
Shawnee, KS USA